

Important Safety Instructions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the

other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Warning

- 1 These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the

operating instructions unless you are qualified to do so.

 
- 2 Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- 3 Avoid foreign bodies and liquids entering the device.
- 4 Do not place open e.g. lit candles, on or directly adjacent to the device.
- 5 Do not use any corrosive or abrasive cleaning agents. These could damage the surface of the device.
- 6 The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 7 Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
- 8 The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 9 The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Identifying the Parts

Top view

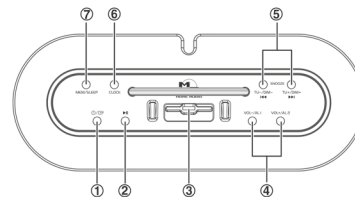


- 1 Turn on or turn off the unit.
- Select a source.
- 2 Play/pause/resume playback.
- Press and hold this button to activate automatic programming in FM mode.
- 3 **DOCK**
- iPod/iPhone Docking
- 4 **VOL-/AL1, VOL+/AL2**
- Increases/decrease the volume.
- Press and hold the buttons to set the alarm 1/2.
- 5 **◀◀/TU-/DIM-, TU+/DIM+/▶▶. SNOOZE**
- In the dock mode, skip to previous/next track.
- In the FM mode, search radio stations manually.
- In the clock setting mode, press the buttons to set the clock.
- In Standby mode, adjust brightness level.
- Repeat the alarm.
- 6 **CLOCK**
- View the current radio frequency.
- Press and hold to set the time when the unit is in standby mode or press to view the time when the unit is turned on.

7 MEM / SLEEP


- Press and hold this button for a few seconds to preset stations manually in FM mode.
- Set the sleep timer.

 Bottom View

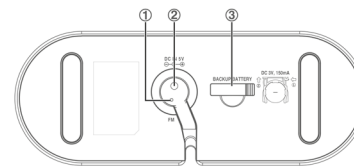

- 1 **FM Aerial**
- 2 **DC IN 5V Socket**
- 3 **BACKUP BATTERY**

 Connect Power




1. Slot the jack plug on the power adaptor into the power point in the underside of the base as shown in the diagram above.
2. Pull the protective cap out of the battery compartment to activate the back-up battery.
3. Slot the power adaptor into a wall socket and turn the power on, if required.

NOTE:

- If the unit does not display or no response, maybe the battery is low power, that need to disconnect the DC power and pull out the battery, after three minutes, then reconnect the DC power and replace a new battery.

 To Replace the BACKUP Battery:

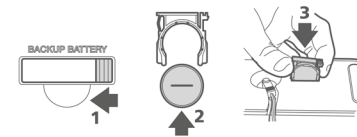

- 1) Press down the flip on the left.
- 2) Pull out the battery tray and remove the old battery.
- 3) Place a new CR2032 battery into the battery tray with correct polarity (+/-) as indicated.
- 4) Insert the tray back into the slot.

Setting the Clock

In standby mode, The built-in clock shows the correct time in the display.

- 1 In standby mode, press and hold the **CLOCK** button to activate the clock setting mode, time indicator will blink.
- 2 Set the minute with the **TU+/DIM+/▶▶** button.
- 3 Set the hour with the **◀◀/TU-/DIM-** button.
- 4 Press the **CLOCK** button to confirm, the built-in clock starts operating and the seconds start counting from 0.

Tip:

During Time Setup, press the ►|| button to select 12/24 hour format.

• Time Display

- During play, press the **CLOCK** button to show the current time on the display for a few seconds.

Set the alarm timer

You can set two alarms which wake up at different time. However the clock must be set correctly for the timer function to work.

- 1 In standby mode, press and hold the **AL1** or **AL2** button for several seconds, time indicator will blink.
- 2 Set the minute with the **TU+/DIM+/▶▶▶** button and set the hour with the **◀◀/TU-/DIM-** button.
- 3 Press the **VOL-/AL1** or **VOL+/AL2**, then press **◀◀/▶▶▶** buttons to select an alarm sound source: buzz, FM, iPod.
- 4 Press the **VOL-/AL1** or **VOL+/AL2** button, volume indicator will blink. Set the alarm volume with the **◀◀/▶▶▶** buttons.
- 5 Press the **VOL-/AL1** or **VOL+/AL2** button to confirm.

• Activate and Deactivate the Alarm Timer

Press **VOL-/AL1** or **VOL+/AL2** repeatedly to activate or deactivate the timer.

• Repeat Alarm

You can press to adjust the interval to repeat alarm. When the alarm rings, press the **SNOOZE (◀◀ or ▶▶▶)** buttons. The alarm repeats ringing 9 minutes later.

• Stop Alarm Ring

When the alarm rings, press the ◻/☒ button. The alarm stops but the alarm settings remain.

Turn ON/OFF

When you first connect the unit to the mains socket, the unit will be in STANDBY mode.

- Press the ◻/☒ button to turn on.
- Press and hold the ◻/☒ button to turn off.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.

Select Modes

- Press the ◻/☒ button repeatedly to select FM or DOCK mode.
- If there is no signal under the DOCK modes, the unit will automatically switch off with in 15 minutes.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

- Press **MEM / SLEEP** button repeatedly to select a set period of time (in minutes):

→ 90 → 60 → 30 → 15 → close up ◻

- When the sleep timer is deactivated, "Zz" disappears on the display.

iPod/iPhone Operation

You can enjoy audio from iPod/iPhone through this unit.

Listen to the iPod/iPhone

Note:

This unit does not support apple 30-pin model.

1. Press the ◻/☒ button to select **DOCK** source.
2. Place an iPod/iPhone into the dock.
3. Start to play the connected iPod/iPhone.
 - To pause/resume play, press the ►|| button.
 - To skip to a track, press the ◀◀/TU-/DIM- or TU+/DIM+/▶▶▶ buttons.
 - To search during play: press and hold ◀◀/TU-/DIM- or TU+/DIM+/▶▶▶ buttons, then release to resume normal play.

Charge the iPod/iPhone

The docked iPod/iPhone begins to charge while the unit is connected to AC power.

FM Operation

Auto Scan and Save Preset Station

- Ensure that you have connected and fully extended the FM antenna.
- 1 Press the ◻/☒ button to select **FM** source.
- 2 Press and hold the ►|| button for few seconds to activate automatic programming. All available stations are programmed in the order of waveband reception strength.
- The first programed radio station is played automatically.

• Tune to a Preset Radio Station

- To select and listen to a saved radio station, press the ►|| button to skip to the next preset radio station.

Tuning in a Station

- Press the ◀◀/TU-/DIM- or TU+/DIM+/▶▶▶ buttons repeatedly until you find the station you want.
- Press and hold the ◀◀/TU-/DIM- or TU+/DIM+/▶▶▶ buttons, the frequency changes down or up automatically until a station is found.

Presetting Stations Manually

- You can preset up to 20 FM stations.
- 1 Tune in the desired station, then press and hold the **MEM / SLEEP** button, the station will be stored and the screen will then show the preset number.

Note:

The unit will switch the Stereo or MONO channel to receive the FM radio mode automatically, it can get the best effect.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is connected properly.
- Ensure that there is power at the AC outlet.
- Press ◻ button to turn the unit on.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.

Specifications

Adapter Input.....AC100-240V~ 50/60Hz, 0.5A
 Adapter Output.....DC 5.0V --- 2.2 A
 Total Harmonic Distortion 1%(1kHz, 1W)
 Frequency Response 250Hz - 14.5kHz
 Tuning Range87.5 - 108 MHz
 Unit Size (WxDxH).....194mm x 74mm x 61mm
 Battery3V(CR2032)

Standard Accessories

Instruction Manual..... x 1
 Mains Adapter..... x 1

AZATOM®
 ADVANCING AUDIO TECHNOLOGY

