

AZATOM®

Studio Compact 2

Home Entertainment System



Optical Audio



AUX-IN



Bluetooth



Equaliser



Remote Control



User Manual

This manual is available to download online at www.azatom.com

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
 - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Special note:** When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Thank you for purchasing the excellent quality sound bar for your home.


We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Check the package contents


Remove all items from the packing. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:


1. Studio Soundbar
2. Remote control
3. Mains adapter
4. OPTICAL cable
5. Instruction manual

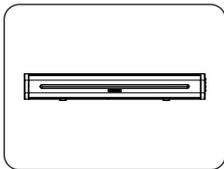


Studio Soundbar

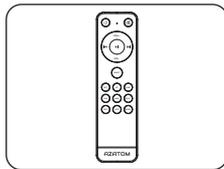


Remote control

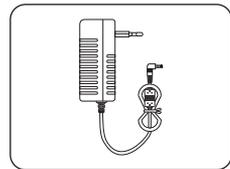

Mains power adapter

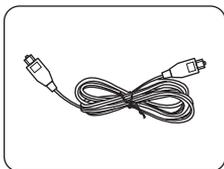


OPTICAL cable

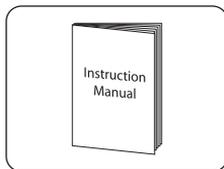

Instruction manual

Product description

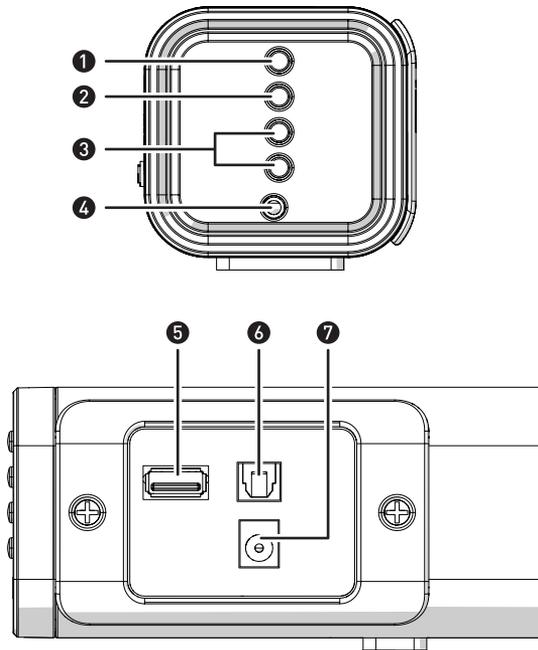


1. POWER ---- Switch the unit on or off.
2. MODE ---- Select a input: BT, OPTICAL, USB, AUX IN.
3. Volume + and - ---- Press to adjust the volume up or down.
4. 3.5mm AUX in socket
5. USB in socket
6. Optical in socket
7. DC (12V 1.5A) socket

Mode Indicator lights

STATE	INDICATOR LIGHTS
Power off	Red
USB	Baby blue
AUX in	Green
Optical in	Yellow blue
Bluetooth ready	Flashing blue
Bluetooth connected	Blue


Remote control (batteries installation)

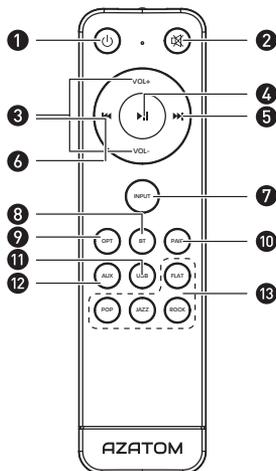

1. button ---- Switch the unit between On and Standby mode.
2. button ---- Press to mute the sound. Press again resume.
3. VOL +/- buttons ---- Adjust the volume.
4. button ---- Play/pause/resume playback in Bluetooth and USB mode.
5. button ---- Skip forwards to the next track in Bluetooth and USB mode.
6. button ---- Skip backwards to the beginning of the track or to the previous track in Bluetooth and USB mode.
7. INPUT button ---- Select the modes.
8. BT buttons ---- Bluetooth function Select button.
9. OPT buttons ---- Optical function Select button.
10. BT PAIR button ---- Disconnect the bluetooth device.
11. USB button ---- USB function Select button.
12. AUX button ---- AUX(3.5mm headphone input) function Select button.
13. FLAT/POP/JAZZ/ROCK buttons ---- Press the button to select a desired music mode: FLAT, POP, JAZZ, ROCK.

Battery Replacement for the Remote Control

1. Press and slide the back cover to open the battery compartment.
2. Insert two "AAA" size batteries (supplied). Make sure the (+) and (-) ends of the batteries match (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

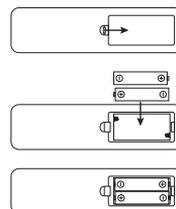

Handling the battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage which can cause fire personal injury or damage to property.
- We recommend to use the battery type indicated in this manual.
- Don't install or mix new and old batteries OR mix different types of batteries.
- Don't dispose used batteries as a kind of domestic waste. Dispose of them accords to local regulations.

Handling the Remote Control

- Don't drop the remote control.
- Don't spill water or any liquid on the remote control.
- Don't place the remote control on a wet object or near any source of excessive heat.
- Take out the batteries from the remote control if it is not necessary to use for a long period of time. Otherwise, they may have corrosion and leakage which incurs physical injury, property damage or fire etc.


Connections

Using the USB Connection

Connect your USB device to the USB jack on the soundbar.

Press the "USB" button on the remote control or "MODE" button on main unit repeatedly to select the USB in mode.

Play music files from the USB device through the Soundbar.

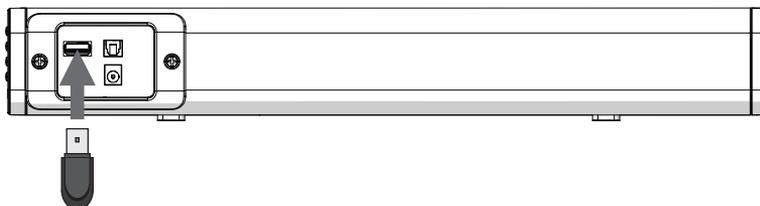

Note: USB jack can be used for software upgrade.

Using the MP3 LINK Connection (AUX IN)


Plug one end of a 3.5mm audio input cable (included) into the Line in on the unit. Before use, disconnect any cables connected to the Stereo RCA Inputs.

Plug the other end of the cable into the audio output/headphone output on an MP3 player or other audio source.

Press the POWER button on side panel or POWER button directly on the remote control to switch on the unit.

One touch the MODE button repeatedly or directly press AUX in button on remote control to enter AUX in mode. The mode indicator will turn green.

Audio played through the connected device will now be heard through the speakers.

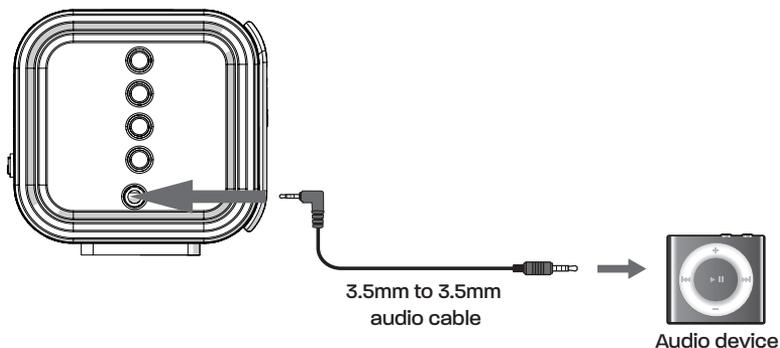

Connecting to the Mains Supply

Ensure that the power supply voltage is in the voltage of 100V~240V.


This unit is designed to use adapter.

Connecting the unit to any other power source may cause damage to the unit.

Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket.

The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.

Connect the Adapter to the unit and AC Socket.

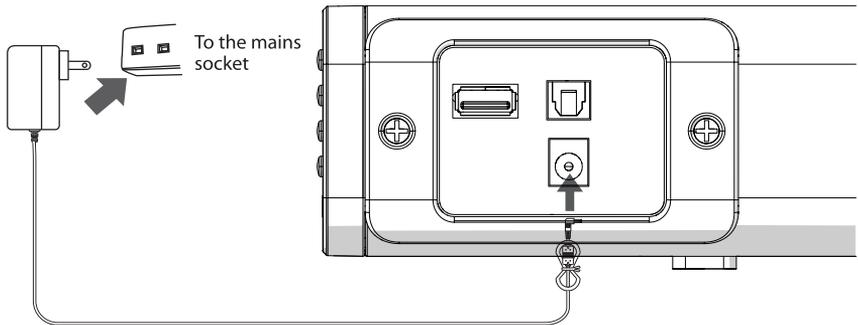

 Ensure all audio connections of the unit are connected before connecting to the mains power socket. Unplug the power cord from the outlet when the unit is use for an extended period of time.

Bluetooth Operation

Bluetooth Operation

Pairing a Bluetooth Device for the First Time

Press the POWER button on the unit or the POWER button on the remote control to switch on the unit.

Select and press the BT button directly on the remote control or press the MODE button repeatedly to enter Bluetooth mode, indicated by a flashing blue light.

Using the native controls on your Bluetooth device, selects the “Studio Compact 2” in your Bluetooth settings to pair.

If your device requests a password, enters the default “0000”. Refer to the “user manual” for your specific device for instructions on pairing and connecting Bluetooth devices.

When successfully paired and connected, a beep will issue from the unit and the Pairing Indicator will display a solid blue light. After initial pairing, the unit will stay paired unless unpaired manually by the user, or until it is erased due to a reset of the device.

Soundbar has Bluetooth connected to a device, you can press and hold the MUTE/PAIR button 3 seconds to exit this device in order to pair the device with another Bluetooth device.

If your device should become unpaired or you find it is unable to connect, repeat the above steps.

Playing Audio Wirelessly

Follow the instructions for Pairing a Bluetooth Device.

Use the native controls on the connected Bluetooth Device to select a track.

To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device.

Audio played through the connected Bluetooth device will now be heard through the speakers.

Specifications

Amplifier	
Power output	Max power output 50W
Frequency response	20Hz - 20KHz \pm 6dB
Input sensitivity	700mV
Main unit	
Power supply	Input: 100-240V ~ 50-60Hz Output: 12V $\overline{\text{---}}$ 1.5A
Standby power consumption	\leq 0.5W
Full range speaker drivers	Impedance: 4 Ohm (50*90mm) Frequency response: 30Hz ~ 20KHz
Dimensions	420 x 65.5 x 63mm

For technical support or to ask us a question please visit www.azatom.com



@AZATOM

**REGISTER YOUR PRODUCT ONLINE. TO LEARN MORE &
REGISTER FOR OUR AZATOM WARRANTY* PLEASE VISIT:
WWW.AZATOM.COM/WARRANTY**

AZATOM® 2021 ALL RIGHTS RESERVED. AZATOM® IS PART OF AZATOM GROUP LIMITED.
SEE SITE FOR SAFETY INFORMATION. AZATOM® RESERVE THE RIGHT TO WITHDRAW ANY AND ALL
PROMOTIONS WITHOUT NOTICE. FOR FULL WARRANTY, EXTENDED WARRANTY AND PROMOTIONAL
OFFER TERMS & CONDITIONS PLEASE VISIT WWW.AZATOM.COM/TERMS-CONDITIONS

***REGISTRATION REQUIRED**