

Desire

DAB+ / DAB / FM Radio



User Manual



Thank you for shopping with **AZATOM®** Please read this manual carefully before using your new device and keep it safe for future reference.

AZATOM® is a British company specialising in advanced audio products. All our products are developed by our In-house Team of British Designers.

We are experts in sound engineering and great care and attention goes into the design and manufacture of every **AZATOM®** product to ensure class leading performance and quality.

Please read the manual thoroughly before operating the device.

Choose a suitable location for the device. Suitable locations are dry, even and anti-slip surfaces on which you may operate the device easily.

Make sure there is proper ventilation for the device.
Remove, if necessary, the protection sheet from the display.

 
This product was designed to be all placed all around your home, all while delivering high quality audio.



Contents

Section:	Page:
Controls & Interface.....	1
Getting Started, What's in the box.....	2
Operating your Radio.....	3
Selecting a Station - DAB, Finding new Radio Stations - DAB.....	4
Secondary Services - DAB.....	5
Auto Scan - DAB.....	6
Manual Tuning - DAB.....	7
Dynamic Range Control - DAB.....	8
Auto Search Tuning - FM.....	9
Manual Tuning - FM.....	10
Preset Stations - FM & DAB.....	11
Recalling Presets, Brightness Settings.....	12
Sleep Function.....	13
Backlight Setting, Time/Date Setting.....	14
Alarm Setting.....	15
Snooze - Stop Alarm.....	17
Aux-IN.....	18
FM Stereo/Mono.....	19
Earphones, Languages.....	20
Technical Specifications.....	21
Factory Reset.....	22

Controls & Interface

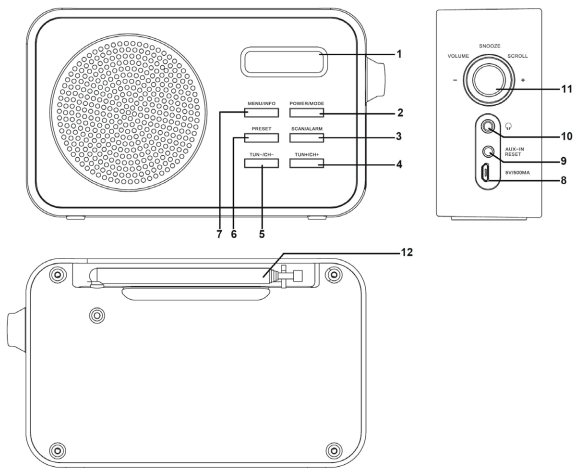

1. **Display**

2. **Power / Mode**

(Quick press turns the radio on,
Press and hold to turn the radio off.)

3. **Scan / Alarm**

4. **CH+ / TUN+**

5. **CH- / TUN-**

6. **Presets**

7. **Menu / Info**

8. **DC Power IN**

9. **AUX Port / Reset**

10. **3.5mm Earphone**

11. **Snooze / Select /
Volume / Scroll**

12. **Telescopic Aerial**

What's in the box

- **AZATOM® More Audio Desire DAB Radio**
- **User Manual**
- **Power Adapter**
- **Warranty Card**

Getting Started

Installation

Please read the manual thoroughly before operating the device!

Choose a suitable location for the device. Suitable locations are dry, even and anti-slip surfaces on which you may operate the device easily.

Make sure there is proper ventilation for the device! If necessary, remove the protective plastic sheet from the display.

Power supply (Adapter)

Insert the mains adaptor plug into a properly installed AC socket. Connect the device with the plug connector by inserting the plug into the 5V/500mA USB charging port of the device. Make sure the grid voltage corresponds to the figures on the rating plate.

 
CAUTION:

Only use the supplied power adapter for this device.
Do not use for other devices.

Only use the original AC adapter. This adapter has been specially designed for the built-in battery in order to gradually charge the battery. Any other adapter can shorten the battery life or can damage it or the device.

NOTE:

Disconnect from mains power supply during longer periods of non-use.

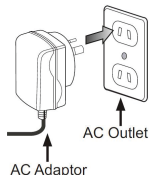

Operating your radio

- 1 - Carefully extend the telescopic aerial.
- 2 - Press the POWER button to switch on your radio. The display will show "Welcome to digital radio."
- 3 - If this is the first time the unit goes into DAB Mode, it will automatically start an 'Auto Scan' to search for available stations.

(Once DAB Mode has been used before, the DESIRE will automatically select the previously played station)



Welcome to
Digital Radio

- 4 - Pressing and holding "SCAN" at any time will automatically start an auto scan. During the scanning process, the lower line of the display shows a bar-graph indicating progress of the scan.



Scanning... 24 
 ■■■■■■■■■■ □□□□□□

- 5 - When the scanning is completed the first station (in alphanumeric order) will be selected. The clock will automatically set to the current time.



BBC R7 
 12B 225.648MHz

- 6 - If the station list is still empty after the scan your radio will display "Service not available"
- 7 - If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.

 
Selecting a station – DAB

- 1 - The top line of the display shows the name of the station currently selected.
- 2 - Push the Tuning+ / Tuning- button to select the list of available stations on the lower line of the display, and push the SELECT button to confirm the desired station.


Finding new radio stations - DAB

Over time new stations may become available. To find new stations you can auto scan as follows.


- 1 - Press the Tuning+ / Tuning-, the display will show "Auto Scan Now".



 - 2 - Click the Tuning+ / Tuning- until the display shows "scan".




 - 3 - Press "SCAN" for auto scan. The display will show "Scanning..." and your radio will perform a scan of the Band III DAB channels. As new radio stations are found the station counter on the right-hand side of the display will increase and the radio stations will be added to the list stored in the radio.




Secondary services - DAB

 - 1 - Some radio stations have additional secondary services associated with them. If a radio station has a secondary service associated with it the display will show ">>" next to the station name on the station list. The secondary service will then appear immediately after the primary services as you push the Tuning+/ Tuning-



- 2 - Click SELECT to select the station

 
- 3 - When the secondary service shuts down, your radio will automatically switch back to the main radio station if it is available.




Auto Scan – DAB

As an alternative to clicking the menu button to select a station, your radio can be set so as to automatically select a station.

 - 1 - Press the MENU button and Tuning+/Tuning- until you find "Settings".




 - 2 - Press Tuning+/Tuning- until "Auto Scan On " shows on the display.



- 3 - Press Tuning+/Tuning- until "YES" is highlighted. Press SELECT to confirm the selection.

 When tuning your radio it will now automatically select a station from the station list.



- 4 - If you do not wish to use the Auto Scan On function press Tuning+/Tuning- until "NO" is highlighted. The radio will require a click to choose a station from the station list.

Manual Tuning – DAB

Manual tuning allows you to tune the radio to the various DAB Band III channels. UK DAB stations are located in the range 11B to 12D.

- 1 - Press MENU and Tuning+/Tuning- until the display shows "Manual Scan", press SELECT to enter the Services Menu.



Auto Scan Now 
<Manual Scan >

- 2 - Press Tuning+/Tuning- to highlight the desired channel.



Manual Scan 
<5A 174.928MHz >

- 3 - Press MENU, the graph will indicate the signal strength, and the upper line will show the name of the DAB multiplex (group of radio stations). Any stations found will be added to the stored list in the radio.



11D 222.064MHz 
■■■■■|■■■■■■■■■■■■■■■■■■■■

- 4 - Press MENU to return to the normal tuning mode.

 


87.50MHz 
Scanning...


Dynamic Range Control – DAB

Dynamic range control (also known as DRC) can make quieter sounds easier to hear when your radio is used in a noisy environment.



- 1 - Press the POWER button to switch on your radio.
- 2 - Press MENU and Tuning+/Tuning- until the display shows "DRC". Press SELECT to enter the settings menu.
- 3 - Press Tuning+/Tuning- until "DRC" is highlighted.



 - 4 - Press SELECT to enter the adjustment mode.



  - 5 - Press Tuning+/Tuning- to select the required DRC setting (the default is 0).



DRC OFF - DRC is switched off, Broadcast DRC will be ignored.

DRC LOW - DRC level is set to 1/2 that sent by broadcaster.

DRC HIGH - DRC level is used as sent by broadcaster.

 
6. Press MENU to confirm the setting. The display will return to the previous display.

Note: Not all DAB broadcasts are able to use the DRC function. If the broadcast does not support DRC, then the DRC setting in the radio will have no effect.


Auto Search Tuning – FM

1 - Carefully extend the telescopic aerial fully and press the POWER button to switch on your radio.

2 - Press MODE to enter FM mode.



 
3 - Press the Tuning+ button and hold for 2 seconds, your radio will scan and stop automatically when it finds a station of sufficient strength.



4 - After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data present then the radio will display the station name.

5 - To find other stations, press and hold the Tuning+ button as before.

 
6 - To scan the FM band in the opposite direction (high frequency to low frequency) press the Tuning- button and hold for 2 seconds.



7 - When the waveband end is reached your radio will recommence tuning from the opposite waveband end.

Manual Tuning – FM

 - 1 - Carefully extend the telescopic aerial fully and press the POWER button to switch on your radio.
- 2 - Select FM mode as previously described if required.
- 3 - Press Tuning+/Tuning- to tune to a station. With each press of tuning-/+ the frequency will change up or down by 50 kHz.




- 4 - When the waveband end is reached the radio will recommence tuning from the opposite waveband end.

Preset Stations – FM and DAB

You may store your preferred DAB and FM radio stations to the preset station memories. There are 60 memory presets in your radio, 30 for DAB and 30 for FM. Presets are remembered by your radio in the event of a power failure. The procedure for setting presets and using them to tune stations is the same for FM and DAB modes:

 - 1 - Press POWER button to switch on the radio.
- 2 - Select the desired waveband.
- 3 - Tune to the required station as previously described.
- 4 - Press PRESET button and hold to enter pre-set store, and then press to select the desired preset number which you wish to store the station.
Press SELECT to confirm.



- 5 - Press SELECT to confirm, for example, "Preset 01 stored". The station will be stored under the chosen pre-set. Repeat this procedure as needed.



- 6 - Stations which have been stored in preset memories may be overwritten by following the above procedure.

Recalling Presets

- 1 - Press the POWER button to switch on the radio.
- 2 - Press PRESET, then the display will show "Preset Recall" then press SELECT to tune to the station stored in preset memory.

Preset Recall 
 <01: BBC R2 >

BBC R2 P01 
 The latest news

Note: If you have not previously stored a preset station and the preset button is pressed "Empty preset" will be displayed.

Brightness setting

The brightness of the display can be adjusted on your radio

- 1 - Press MENU and Tuning+/Tuning- until "Set Brightness" shows on the display.

Settings 
 <Set Brightness >

- 2 - Press the SELECT to enter adjustment mode.
- 3 - Press Tuning+/Tuning- to adjust the brightness level (between High, Medium, and Sleep Low). The brightness level indication on the screen will change at the same time. When you find the setting that gives you the best legibility for the location in which the radio is used, press SELECT to save the setting.

Sleep function

Your radio can be set to turn off after a preset time has elapsed. The sleep setting can be adjusted between 15 and 90 minutes. Ensure your radio is switched on.


- 1 - Press MENU and Tuning+/Tuning- until "Set Sleep time" is highlighted on the display.




Settings 
<Set sleep time >

- 2 - Press SELECT to enter adjustment mode.

- 3 - Press Tuning+/Tuning- to set the desired sleep time between 15, 30, 45, 60, 75 and 90 minutes or Sleep Off which will cancel the sleep function.

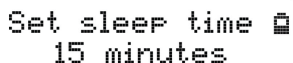

Set sleep time 
15 minutes



Set sleep time 
Sleep off

- 4 - Press SELECT to confirm the setting. The sleep timer indicator "⏰" will show on the display. Your radio will switch off after the pre-set sleep time has elapsed.



BBC R7 015 
Im sorry I have

Backlight Setting

- 1 - Press the MENU and Tuning+/Tuning- until " Backlight Auto" is highlighted on the display.
- 2 - Press Tuning+/Tuning- until "NO" is highlighted. Press SELECT to confirm selection. The backlight will never dim. If select "YES", the LCD would dim 1/4 after 20 seconds, and dim 1/2 after 2 minutes.

Backlight Auto
NO <YES>



Time/Date Setting

When no DAB/FM signal, you need to set the TIME and DATE manually.

- 1 - Press MENU to enter the settings menu.

FM
<Settings



- 2 - Press Tuning+/Tuning- until " Settings", press SELECT to enter.
- 3 - Press Tuning+/Tuning- until " Set Time/Date", press SELECT to enter.
Or Tuning+/Tuning- to set the time to AUTO UPDATE, 12/24 hours, and update the date format as well.

Settings
<Set Time/Date



- 4 - Press Tuning+/Tuning- and SELECT to set the correct time and date.

Set time
01:25



Set date
- 1-2016



ALARM SETTING

NOTE: PLEASE SELECT A RADIO STATION BEFORE SETTING THE ALARM.


You will be given the option to choose from last station used or one of your favourite preset channels.

- 1 - Press ALARM to enter the setting menu, press ALARM again to choose ALARM 1 or ALARM 2.


Alarm 1 Setup 

Alarm 2 Setup 


- 2 - Press Tuning+/Tuning- to set the alarm time and press SELECT to confirm.


Alarm 1 Wizard 
On time 00:02


- 3 - Press Tuning+/Tuning- to set the duration 15, 30, 45, 60, 90 minutes and press SELECT to confirm.

Alarm 1 Wizard 
Duration 60


- 4 - Press Tuning+/Tuning- to set the alarm source and press SELECT to confirm.


Alarm 1 Wizard 
Source Buzzer


Alarm 1 Wizard 
Source FM


Alarm 1 Wizard 
Source DAB

- 5 - Press Tuning+/Tuning- to set the Once / Daily / Weekdays / Weekends , choose the days on which the alarm is active.

Alarm 1 Wizard 
Once

Alarm 1 Wizard 
Daily


Alarm 1 Wizard 
Weekdays


Alarm 1 Wizard 
Weekends

- 6 - Press Tuning+/Tuning- to set the alarm volume and press SELECT to confirm.

Alarm 1 Wizard 


- 7 - Press Tuning+/Tuning- to save the alarm setting.

Alarm 1 Wizard 
Alarm On

 
Alarm 
Saved

Snooze - Stop Alarm


- 1 - When the alarm sounds, pressing the SELECT button will temporarily silence the alarm, you can choose the time from 5, 10, 15, 20, 25, 30 minutes and snooze off.



- 2 - The snooze function also has a countdown allowing you to see how long before the alarm re-sounds.



 - 3 - When you choose SNOOZE OFF, the radio returns to standby mode, showing the time and date. Press POWER to turn it on.




Stop Alarm

When the alarm is sounding you can press any buttons except the Snooze button one time to stop the alarm sound. The Desire Radio will then return to Standby mode.

AUX-IN

Aux-in mode plays audio from an external source such as a smartphone or tablet.

 1. Plug in the end of a 3.5mm audio cable (not included) into the headphone or line out jack on your Desire, plug the other end of cable into the unit AUX-IN jack on the back of the Desire.
2. Turn on the external audio source and play your device.
3. Press MODE button to "Auxiliary Input" mode.
4. The volume level can now be controlled through the main unit. Operate all other functions on the external device as usual.

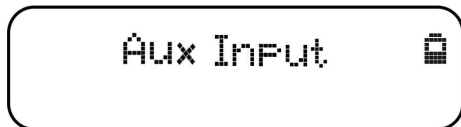

Notes:

 
If you're connected to the Line out Jack of your external device, then you only need to adjust the volume control of this unit. If you're connected to the Headphone Jack of your external device, then you may need to adjust both the volume control of your external device and the volume control of this unit to find the most desirable volume setting.

Please ensure the cable is disconnected to listen to the DESIRE in other modes such as DAB and FM.


FM Stereo/Mono (Earphones only)

If a station being received is weak, some distortion may be audible (especially when listening using earphones).


- 1 - Press and hold MENU button, "Settings" is highlighted. Press SELECT to enter this function.



 - 2 - Press Tuning+/Tuning- until the display shows "Audio setting" then press SELECT.




 - 3 - Press Tuning+/Tuning- until "Forced mono" is displayed. Press the SELECT to select mono. Your radio will select the mono audio mode.



- 4 - To return to stereo mode press Tuning+/Tuning- until the display shows "Audio setting" then press SELECT.

 - 5 - Press Tuning+/Tuning- until "Stereo allowed" is displayed. Press SELECT, your radio will switch to stereo mode.



Note: Stereo listening is only available when listening via earphones.

Earphones (NOT INCLUDED)

The lead connecting the earphones to your radio acts as an aerial when plugged into the Earphone socket.

- 1 - Plug the earphones into the Earphone socket on the side of your radio.
- 2 - Check that the Volume level is not too loud before placing the ear-pieces into your ears.

IMPORTANT: Do not switch on the radio with the earphones connected and inserted in your ear. Excessive sound pressure from earphones can cause hearing loss.

Languages

- 1 - Press and hold MENU button, "Settings" is highlighted.
Press SELECT to enter settings.
- 2 - Scroll through the settings menu to find the language options.
- 3 - Select which language you require from: English, German, French or Italian.

Technical Specifications

Power requirement mains: AC 100-240V 50/60Hz DC 5V 500mA

Lithium rechargeable battery: 3.7V, 1800mAh

Battery life full charge

Up to 15 hours using the loudspeaker for 4 hours a day at normal volume.

Up to 18 hours using earphones for 4 hours a day at normal volume.

Frequency Coverage

FM: 87.5-108MHz

DAB: 174.928 - 239.200MHz

Circuit Features:

Loudspeaker: 3.0 inch

Output power: 3W (speaker)

Earphone socket: 3.5mm dia. stereo

Aerial system:

FM: telescopic aerial

DAB: telescopic aerial

 
Factory reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete, it may be possible to restore normal operation by carrying out a system reset operation on your radio. This will restore the radio's settings to their factory defaults. No presets will be stored, and the list of DAB radio stations will be empty.


If you have moved to a different part of the country and you wish to erase local DAB radio stations that are no longer available from the stored list, then you may carry out this procedure. Your radio will automatically re-scan for the DAB stations available at your current location when it restarts.

1 - Press MENU to enter the menu.

2 - Press Tuning+/Tuning- until the display shows "Settings", then press SELECT to enter the settings menu.




 3 - Press Tuning+/Tuning- until the display shows "Factory Reset". Press the SELECT.




4 - If you wish to perform the reset operation, push the Tuning+/Tuning- until "YES" is highlighted on the display and press. A full reset of your radio will be performed, All presets and station lists will be erased.

 If you do not wish to reset your radio press Tuning+/Tuning- until "NO" is highlighted. Your radio will return to the previous menu.



5 - After a system reset a scan of the DAB band will be performed.

 In case of malfunction due to electrostatic discharge, reset the product (temporary disconnection of the power adaptor may be required) to resume normal operation.



IMPORTANT SAFETY INFORMATION

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at www.azatom.com
3. Heed all Warnings.
4. Follow all instructions.
5. Do not clean the apparatus near or with water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during light storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

13. No naked flame sources, such as lit candles, should be placed on the apparatus.
14. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.



IMPORTANT: Please read all instructions carefully before use and keep for future reference



- Risk of electric shock. Do not open



- Read all instructions carefully before use and keep for future reference.



- When servicing, use only identical replacement parts.



AZATOM[®]
ADVANCING AUDIO TECHNOLOGY

www.azatom.com



Azatom



@Azatom.Online



@Azatom

REGISTER YOUR PRODUCT ONLINE FOR THE AZATOM WARRANTY

TO LEARN MORE & REGISTER FOR THE AZATOM WARRANTY PLEASE VISIT
WWW.AZATOM.COM/WARRANTY

*REGISTRATION REQUIRED
AZATOM[®] 2018 ALL RIGHTS RESERVED. AZATOM[®] IS PART OF THE Azatom Group Ltd.

AZATOM GROUP LTD. RESERVE THE RIGHT TO WITHDRAW ANY AND ALL PROMOTIONS WITHOUT NOTICE. FOR FULL WARRANTY, EXTENDED WARRANTY AND PROMOTIONAL OFFER TERMS & CONDITIONS PLEASE VISIT WWW.AZATOM.COM/TERMS-CONDITIONS