

E3000

3 in 1 Magnetic Wireless Charger

USER MANUAL



AZATOM
NEXT GENERATION SOUND



Introduction

Thank You for purchasing the E3000 3 in 1 Wireless Charger. To make the most of its features, we suggest reading the user manual thoroughly, which includes hints and tips to assist in resolving any problems. Please go through all the safety guidelines before using it and keep this manual for future reference.


Package Contents

E1000 Wireless Charger
USB 9V/2A Plug
USB-A to USB-C Charging Cable
User Manual

Specifications

Model: E3000
Input: 5V / 3A 9V/2A
Output:
Up to 2.5W for iWatch
Up to 5W for Earbuds
Up to 7.5W for Mobile Phones

Interface

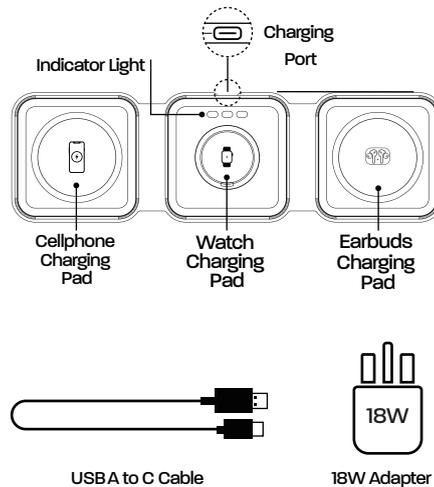

Using the E3000

1. Take the charging cable and connect the USB Type C to the E2000 Wireless Charger.
2. Connect the Type A end to the 9V/2A power adapter and plug into the wall mains.
3. Place your phone on the charging pad.
4. Place your Apple Watch on magnetic charging pad.
5. Place your wireless charging earbuds on the earphone areas.

Compatible Devices

1. Mobile Phone
 - A. Apple iPhone: iPhone 15/Pro/Max - iPhone 14 /Plus/Pro/Max - iPhone 13/Mini/Pro/Max - iPhone 12/Mini /Pro/Max - iPhone 11/Pro/Max - iPhone XS/Max - iPhone XR/Max - iPhone 8/Plus. (Compatible with official MagSafe cases)
2. Smart Watch
 - A. Apple iWatch 2/3/4/5/6/SE/7/SE2/ Ultra/8
3. TWS Bluetooth Earphones
 - A. AirPods 2 - AirPods 3 - AirPods Pro - AirPods Pro 2

Customer Service

Email: customersupport@azatom.com
Phone Number: 01740 629 901
Monday - Friday: 9:00AM - 17:00PM
Saturday: 10:00AM - 14:00 PM

Warnings

1. Avoid forcefully pulling the power cord to prevent damage or detachment.
2. Do not disassemble the product, expose it to fire or water, as it may cause short circuits and leakage.
3. Use the product in suitable environments, avoiding extreme temperatures, humidity, or corrosive conditions to prevent circuit damage and electric leakage.
4. Maintain a minimum distance of 50cm between the product and pacemakers during use.
5. Only use wireless receivers that adhere to the Qi standard for connecting with the transmitting terminal.
6. Operate the charger within a temperature range of 30°C-32°C.
7. Keep magnetic cards, magnetic recording media, and precision machinery away from the charger.
8. Ensure the product is out of reach of children.

Troubleshooting

1. Remove any pop sockets, or credit cards from the back of your phone. Ensure that your phone case is no thicker than 4 mm.
2. If the charger ceases to function, please remove all devices and wait for a short period before attempting to charge again. If the issue persists, please contact our Customer Service team for assistance.
3. The E3000's light indicator has a flashing blue light. Follow these troubleshooting steps:
 - A. Check if your device supports the wireless charging.
 - B. Check if there is anything on the charging pads hindering charging.
 - C. Make sure you are using the Original Type-C charger that came with the device.
 - D. Contact customer support.



This manual is available to download online at www.azatom.com

AZATOM® 2020 ALL RIGHTS RESERVED. AZATOM® IS PART OF AZATOM GROUP LIMITED. SEE SITE FOR SAFETY INFORMATION. AZATOM® RESERVE THE RIGHT TO WITHDRAW ANY AND ALL PROMOTIONS WITHOUT NOTICE. FOR FULL WARRANTY, EXTENDED WARRANTY AND PROMOTIONAL OFFER TERMS & CONDITIONS PLEASE VISIT WWW.AZATOM.COM/TERMS-CONDITIONS